


HardieWall™ System - External Corner

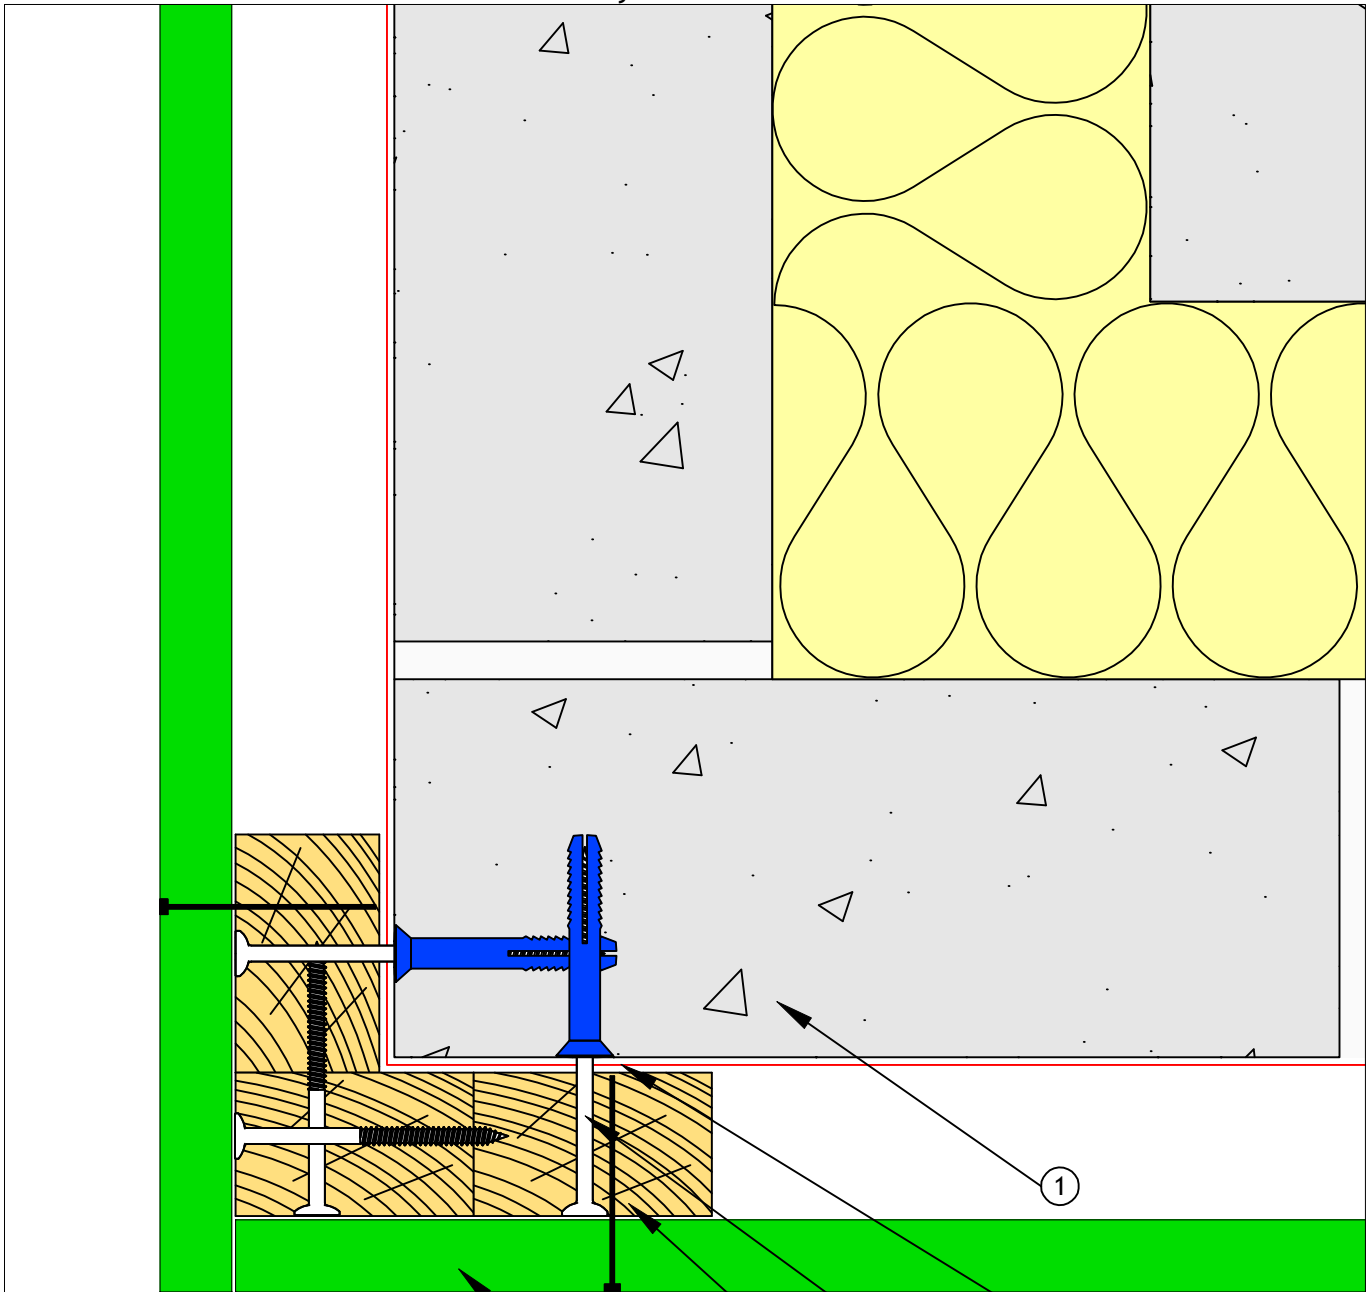

- 1 Masonry
- 2 Breather Membrane - only required for low density / poor quality brick/blockwork. Check with designer
- 3 Fischer SXR 10 x 100T or EJOT SDP-S-10S x 120 E stainless steel screw
- 4 Timber Battens 63mm x 38mm
- 5 51x2.8mm ring shank stainless steel nails
- 6 HardieFloor® 19mm