


HardieWall™ System - External Corner

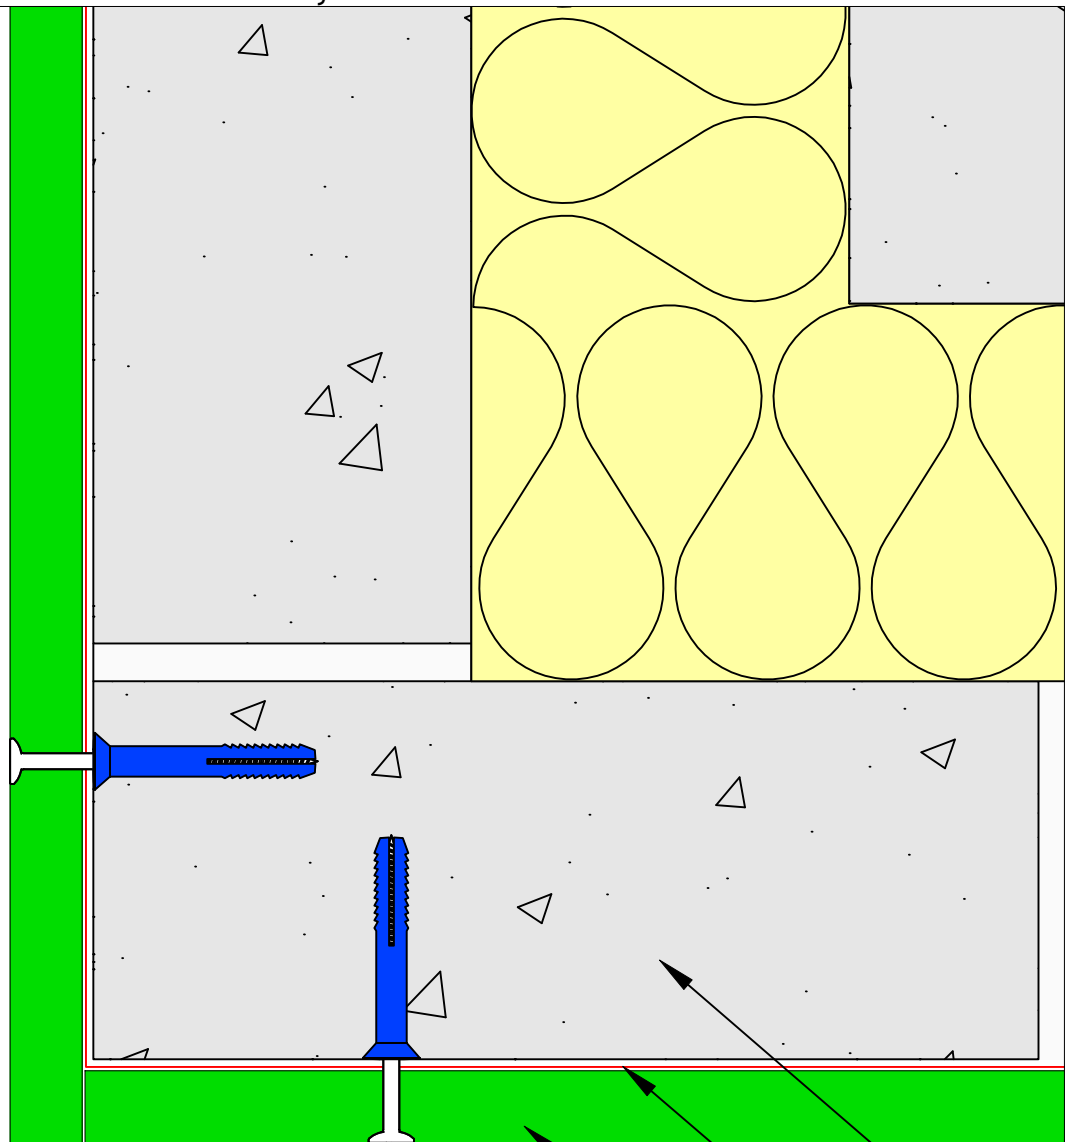

- 1 Masonry
- 2 Breather Membrane - only required for low density / poor quality brick/ blockwork. Check with designer
- 3 HardieFloor® 19mm
- 4 Fischer SXR 10 x 80T or EJOT SDP-S-10S x 80 E stainless steel screw