


Hardiewall™ System - Eaves Detail

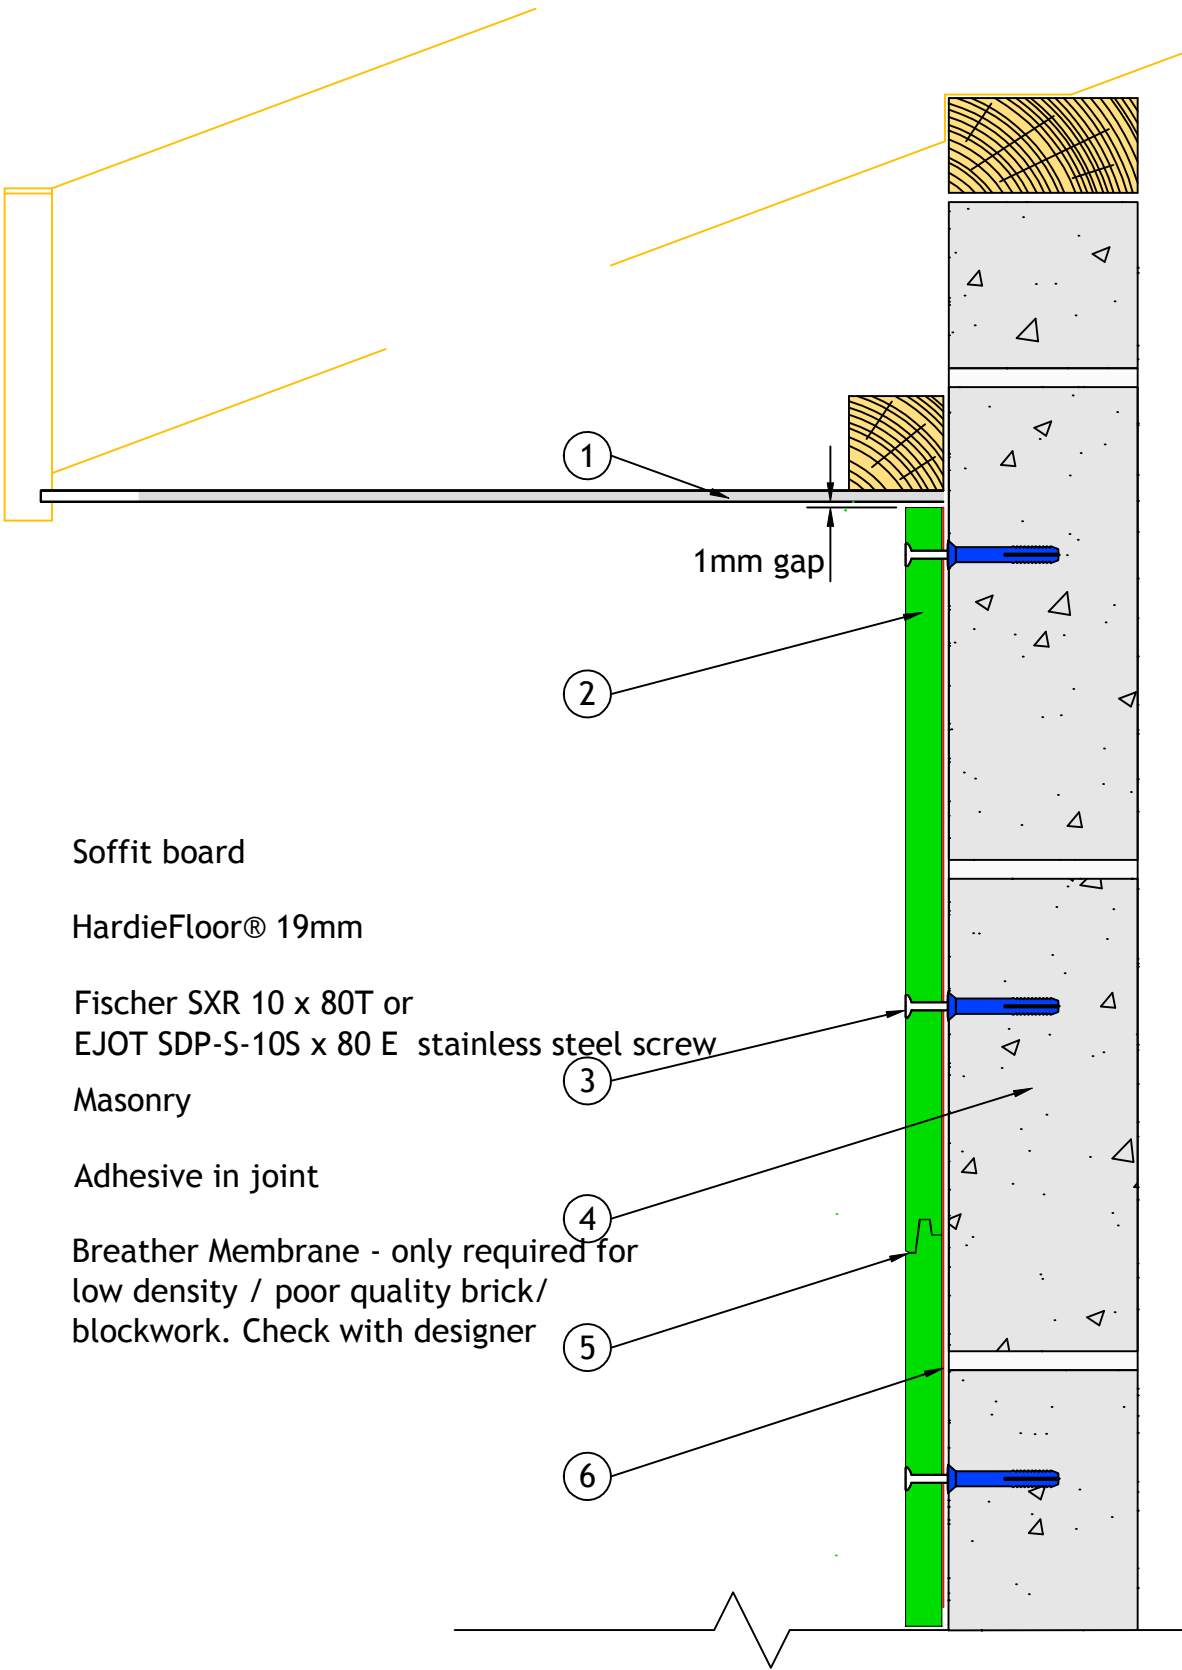

- 1 Soffit board
- 2 HardieFloor® 19mm
- 3 Fischer SXR 10 x 80T or EJOT SDP-S-10S x 80 E stainless steel screw
- 4 Masonry
- 5 Adhesive in joint
- 6 Breather Membrane - only required for low density / poor quality brick/blockwork. Check with designer