HardieWall™ System - Window Reveal Detail

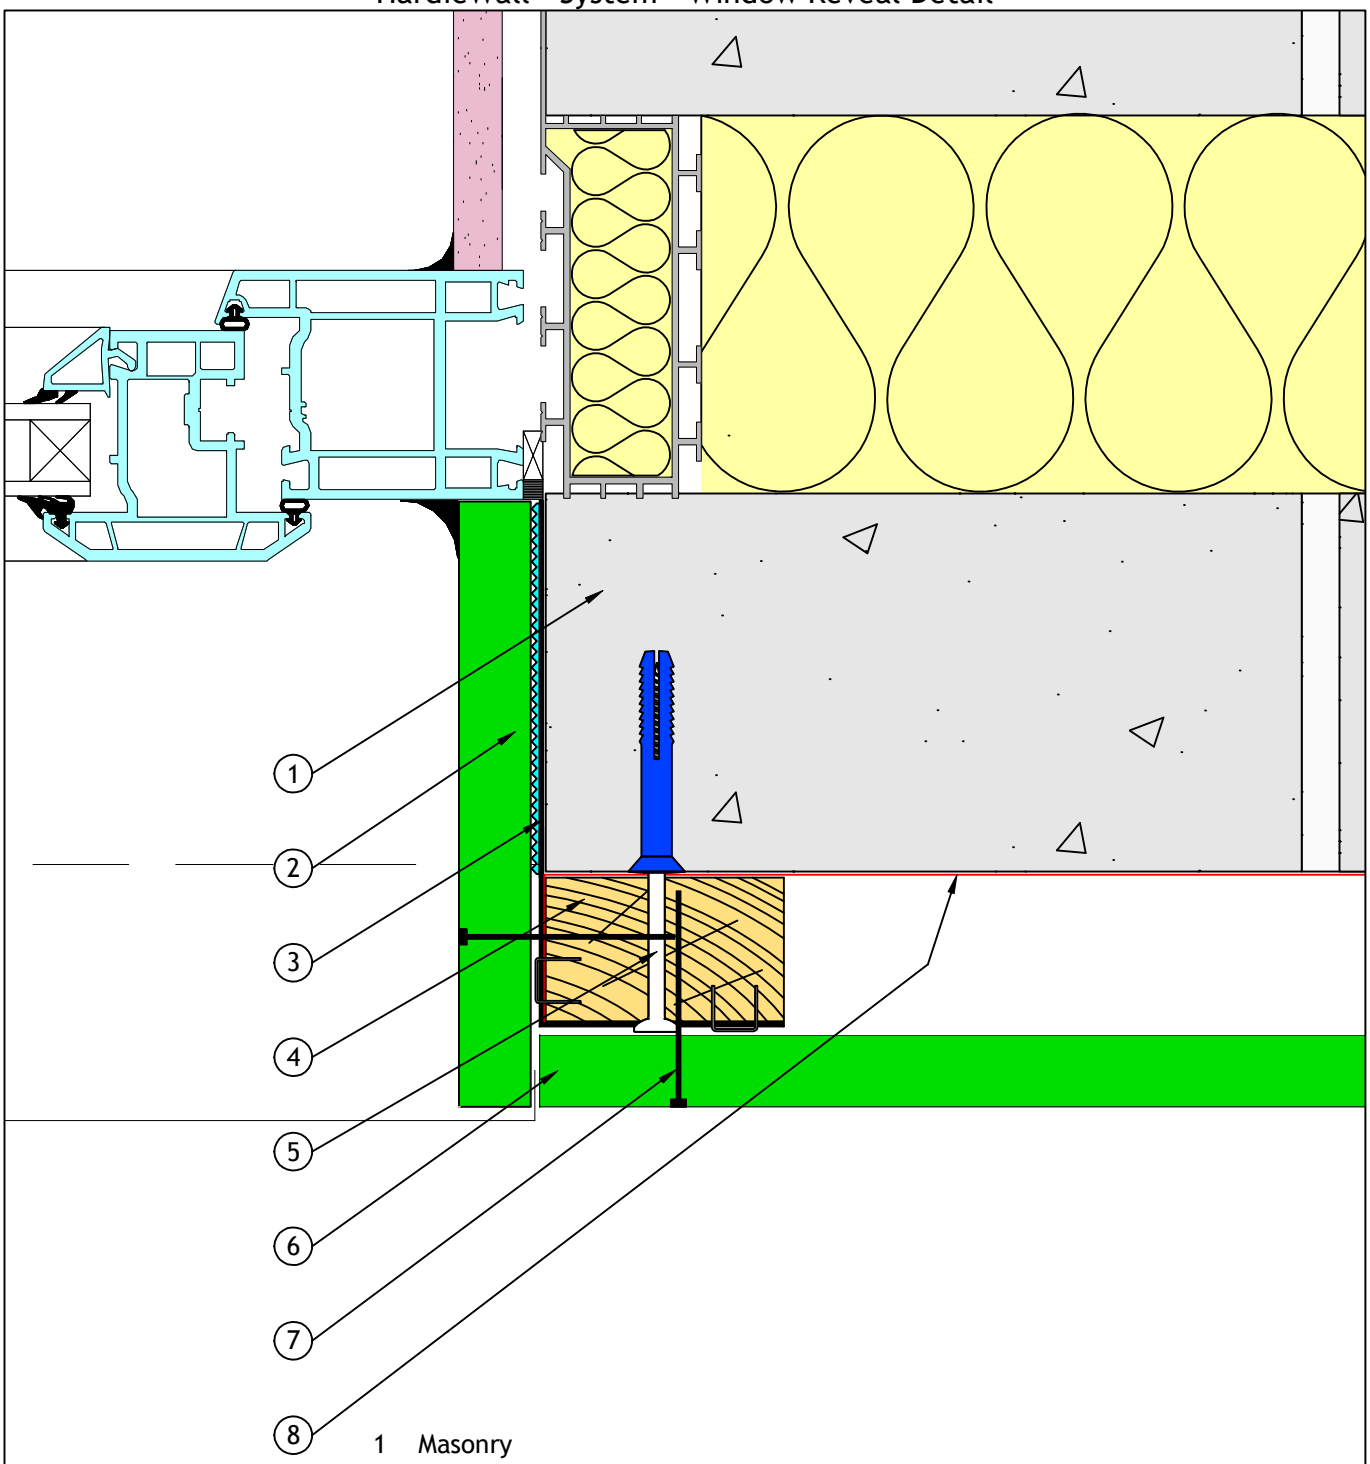

1 Masonry

2 HardieFloor® 19mm on edge

3 EPDM Gasket stapled to batten

4 Timber batten 63mm x 38mm

5 Fischer SXR 10 x 100T or
EJOT SDP-S-10S x 120 E stainless steel screw

6 HardieFloor® 19mm

7 51x2.8mm ring shank stainless steel nails

8 Breather Membrane - only required for low density/
poor quality brick/blockwork.
Check with designer